

# DES3 Series Insert Manual



For complete installation instructions, see the Tube Heater General Manual that accompanies this Series Insert Manual.

**RE-VERBER-RAY**<sup>®</sup>  
by Detroit Radiant Products Company

The DES3 Series Infrared Tube Heater is a positive pressure, single-stage radiant heater system. This insert manual is a supplement to the Tube Heater General Manual and provides specific information related to the DES3 series model. All persons involved with the installation, operation, and maintenance of the heater system must read and understand the information in this insert manual and the accompanying Tube Heater General Manual.

## **WARNING**



Improper installation, adjustment, alteration, service, or maintenance can cause property damage, injury, or death. Read the installation, operation, and maintenance instructions thoroughly before installing or servicing this equipment.

This heater must be installed and serviced by trained gas installation and service personnel only. Failure to comply could result in personal injury, asphyxiation, death, fire, or property damage.



In locations used for the storage of combustible materials, signs must be posted to specify the maximum permissible stacking height to maintain the required clearances from the heater to the combustibles. Signs must either be posted adjacent to the heater thermostats or, in the absence of such thermostats, in a conspicuous location.



**Not for residential use!** Do not use this heater in the home, sleeping quarters, attached garages, etc. **Installation of a commercial tube heater system in residential indoor spaces may result in property damage, serious injury, asphyxiation, or death.**

## For Your Safety

### If you smell gas:

- Do not try to light any appliance.
- Do not touch any electrical switch.
- Do not use any phone in your building.
- Immediately call your gas supplier from a neighbor's phone.
- Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.

### **INSTALLER: Present this manual to the end user.**

Keep these instructions in a clean and dry place for future reference.

Model#: \_\_\_\_\_ Serial #: \_\_\_\_\_  
(located on rating label)

LIODES3-Rev. 21314  
Print: 2M-02/17\_r2-12/17 (CDS)  
Replaces: LIODES3-2M-09/16(CDS)

# Contents

---

<b>1.0 Safety</b> .....	<b>3</b>
Safety Labels and Their Locations .....	3
Clearances to Combustibles .....	4
<b>2.0 Installation</b> .....	<b>6</b>
Gas Requirements .....	6
Electrical Requirements .....	6
Wiring .....	7
Specifications .....	10
Tube Installation Sequence .....	11
<b>3.0 Operation</b> .....	<b>12</b>
Sequence of Operation .....	12
Thermostat .....	12
<b>4.0 Troubleshooting Guide</b> .....	<b>14</b>
<b>5.0 Parts</b> .....	<b>18</b>
Burner Assembly Components .....	18
Tube and Reflector Components .....	19
Kit Contents Check List .....	20
Approvals .....	20
Limited Warranty .....	20

**NOTE:** See **page 10** for a list of available models and specifications.

# 1.0 Safety

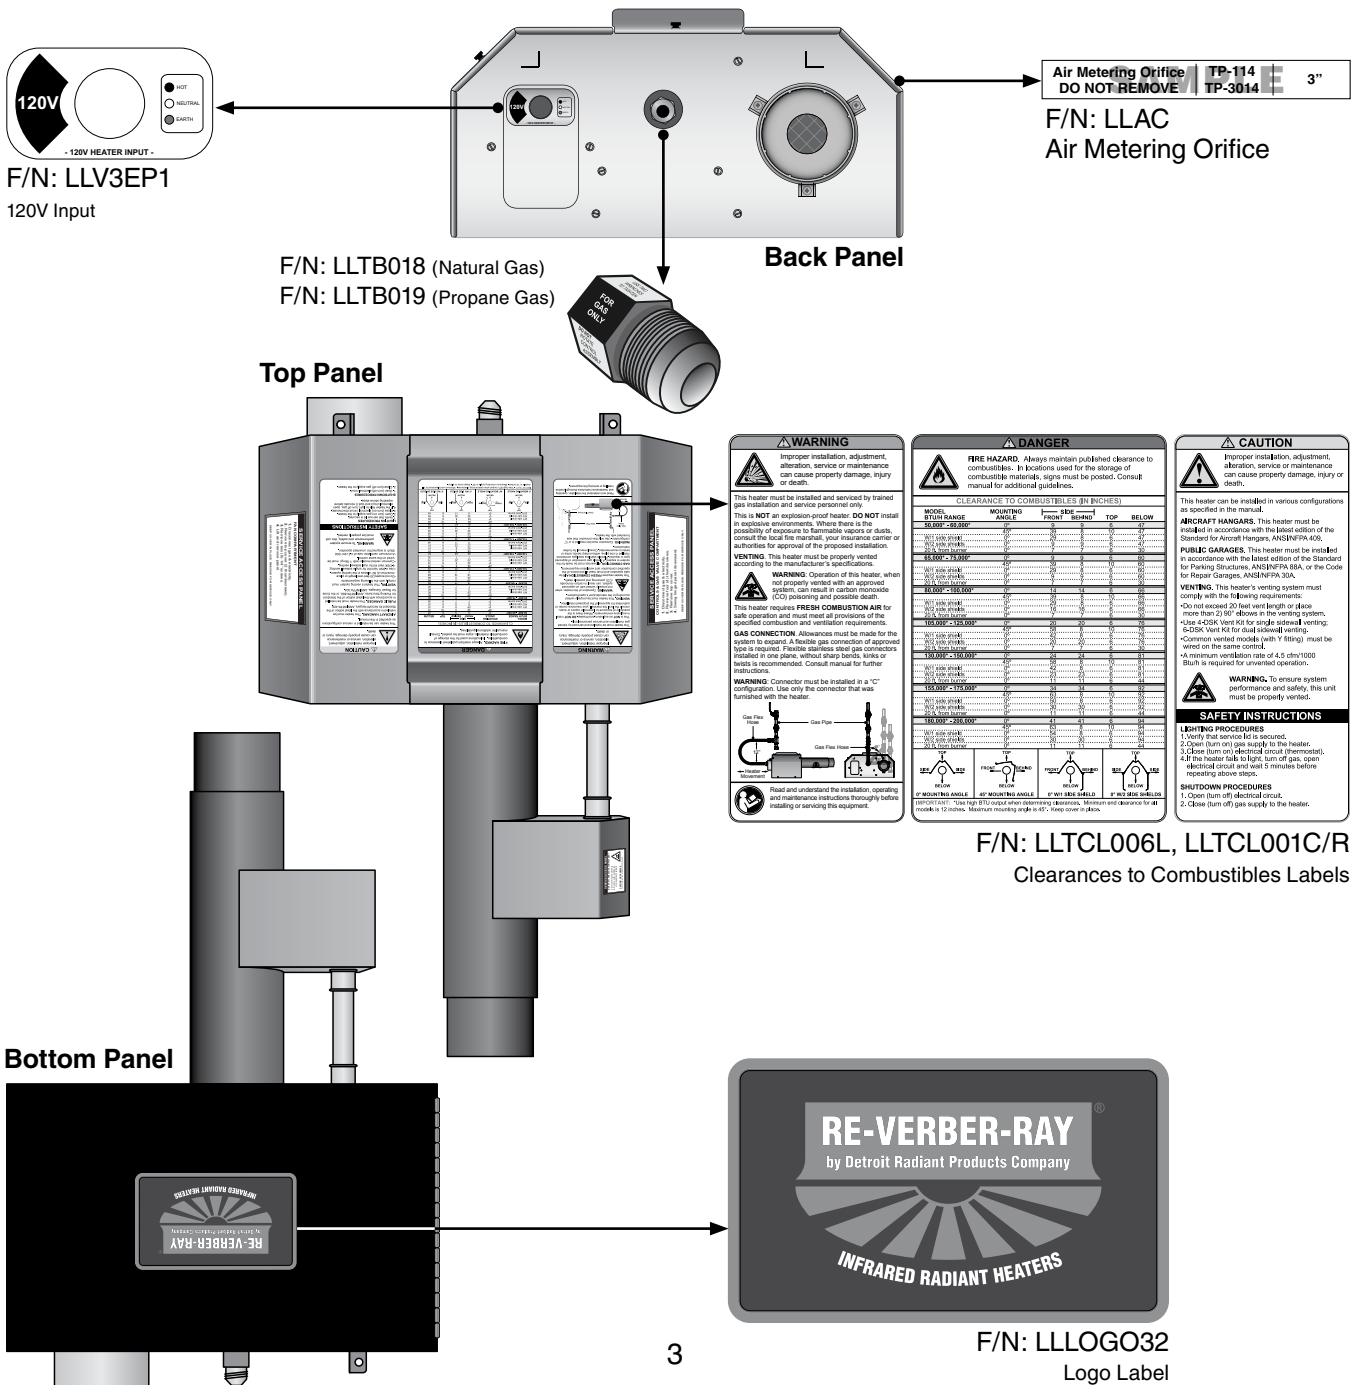
## ⚠ WARNING



Improper installation, adjustment, alteration, service, or maintenance can cause property damage, serious injury, or death. Read and understand the installation, operating, and maintenance instruction thoroughly before installing or servicing this equipment. Only trained, qualified gas installation and service personnel may install or service this equipment.

## Safety Labels and Their Locations

Product safety signs or labels should be replaced by the product user when they no longer are legible. Contact either your local distributor or the product manufacturer for obtaining replacement signs or labels.



**⚠ WARNING**  
Improper installation, adjustment, alteration, service or maintenance can cause property damage, injury or death.  
This heater must be installed and serviced by trained gas installation and service personnel only.  
This is NOT an explosion-proof heater. DO NOT install in explosive environments. Where there is the possibility of exposure to flammable vapors or dusts, consult the local fire marshal, your insurance carrier or authority for approval of the proposed installation.  
**VENTING.** This heater must be properly vented according to the manufacturer's specifications.  
**WARNING:** Operation of this heater when not properly vented with an approved system, can result in carbon monoxide (CO) poisoning and possible death.  
This heater requires **FRESH COMBUSTION AIR** for safe operation and must meet all provisions of the specified combustion and ventilation requirements.  
**GAS CONNECTION.** Allowances must be made for the system to expand. A flexible gas connection of approved type is required. Flexible stainless steel gas connectors installed in one plane, without sharp bends, kinks or twists is recommended. Consult manual for further instructions.  
**WARNING:** Connector must be installed in a "C" configuration. Use only the connector that was furnished with the heater.  
Read and understand the installation, operating and maintenance instructions thoroughly before installing or servicing this equipment.


**⚠ DANGER**  
**FIRE HAZARD.** Always maintain published clearance to combustibles. In locations used for the storage of combustible materials, signs must be posted. Consult manual for additional guidelines.

**CLEARANCE TO COMBUSTIBLES (IN INCHES)**

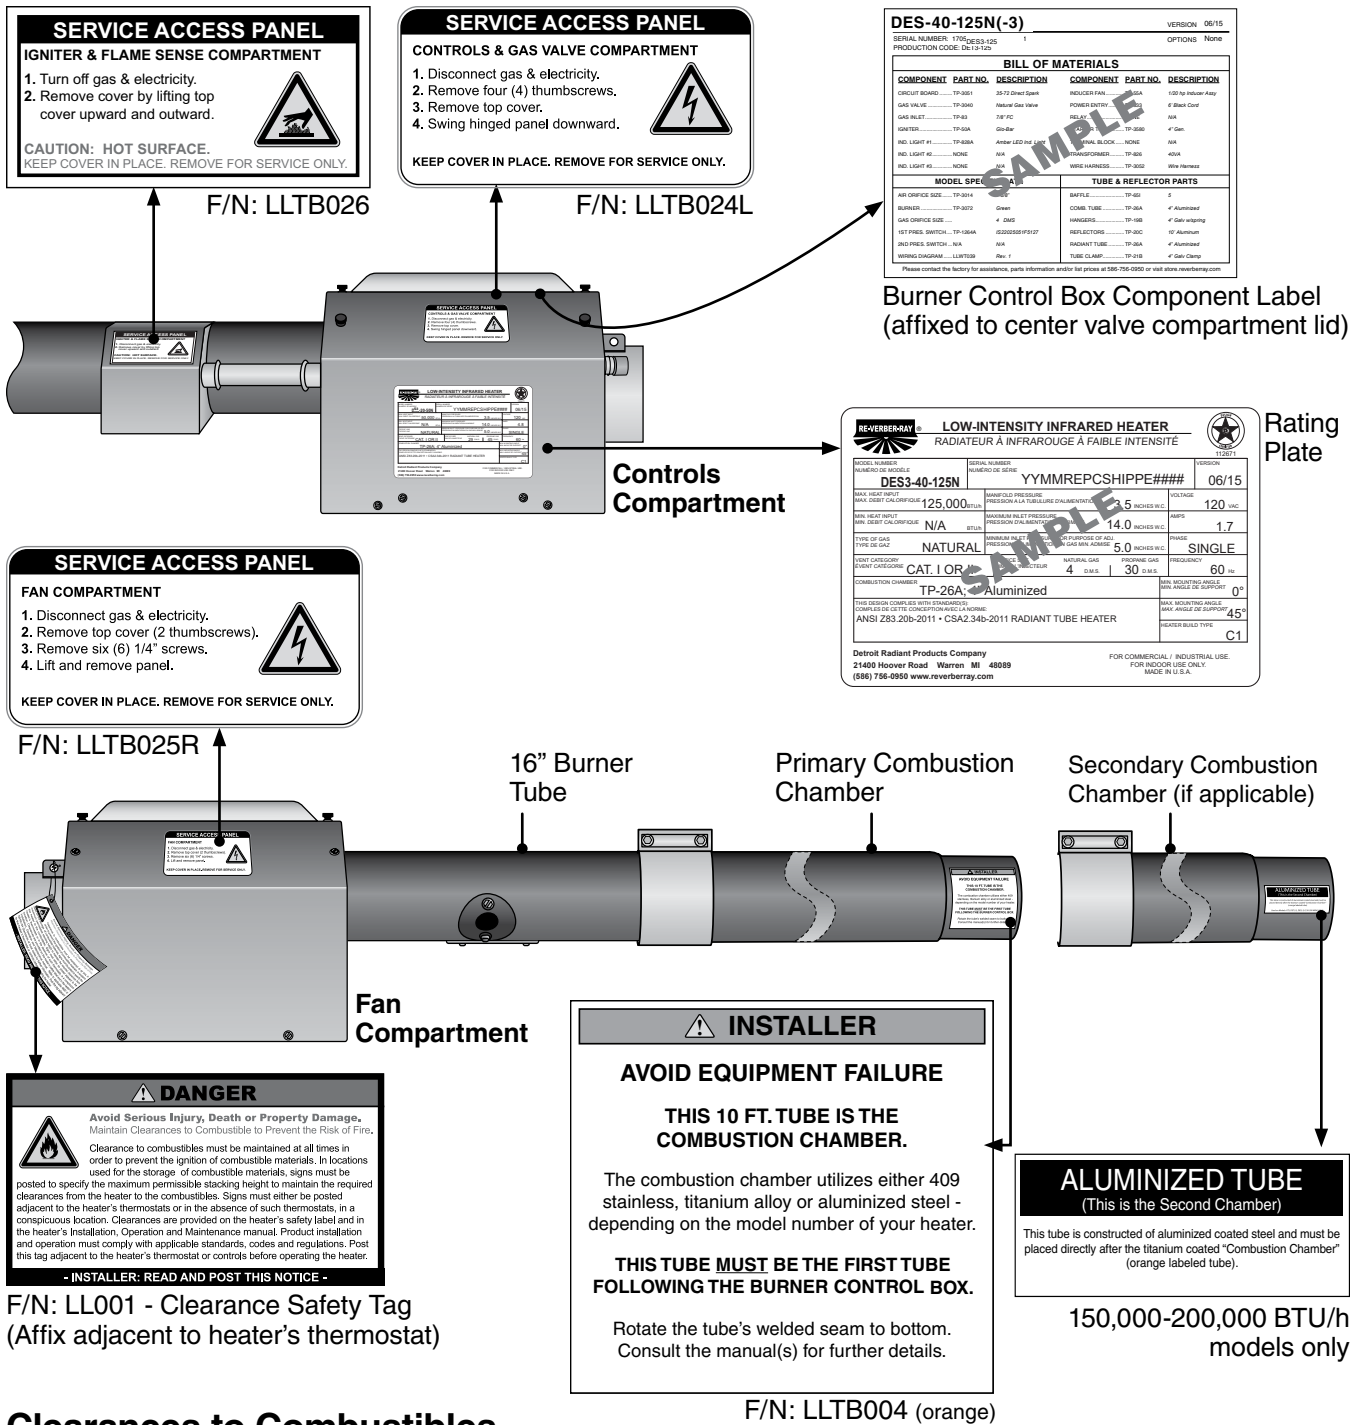MODEL	BTU RANGE	MOUNTING ANGLE	CLEARANCE TO COMBUSTIBLES (IN INCHES)			
			FRONT	BEHIND	TOP	BELOW
LLTCL006L	100,000-150,000	0°	18"	18"	18"	18"
LLTCL006L	100,000-150,000	15°	18"	18"	18"	18"
LLTCL006L	100,000-150,000	30°	18"	18"	18"	18"
LLTCL006L	100,000-150,000	45°	18"	18"	18"	18"
LLTCL006L	100,000-150,000	60°	18"	18"	18"	18"
LLTCL006L	100,000-150,000	75°	18"	18"	18"	18"
LLTCL006L	100,000-150,000	90°	18"	18"	18"	18"
LLTCL006L	100,000-150,000	105°	18"	18"	18"	18"
LLTCL006L	100,000-150,000	120°	18"	18"	18"	18"
LLTCL006L	100,000-150,000	135°	18"	18"	18"	18"
LLTCL006L	100,000-150,000	150°	18"	18"	18"	18"
LLTCL006L	100,000-150,000	165°	18"	18"	18"	18"
LLTCL006L	100,000-150,000	180°	18"	18"	18"	18"
LLTCL006L	100,000-150,000	195°	18"	18"	18"	18"
LLTCL006L	100,000-150,000	210°	18"	18"	18"	18"
LLTCL006L	100,000-150,000	225°	18"	18"	18"	18"
LLTCL006L	100,000-150,000	240°	18"	18"	18"	18"
LLTCL006L	100,000-150,000	255°	18"	18"	18"	18"
LLTCL006L	100,000-150,000	270°	18"	18"	18"	18"
LLTCL006L	100,000-150,000	285°	18"	18"	18"	18"
LLTCL006L	100,000-150,000	300°	18"	18"	18"	18"
LLTCL006L	100,000-150,000	315°	18"	18"	18"	18"
LLTCL006L	100,000-150,000	330°	18"	18"	18"	18"
LLTCL006L	100,000-150,000	345°	18"	18"	18"	18"
LLTCL006L	100,000-150,000	360°	18"	18"	18"	18"

**⚠ CAUTION**  
Improper installation, adjustment, alteration, service or maintenance can cause property damage, injury or death.  
This heater can be installed in various configurations as specified in the manual.  
**AIRCRAFT HANGARS.** This heater must be installed in accordance with the latest edition of the Standard for Aircraft Hangars, ANSI/NFPA 409.  
**PUBLIC GARAGES.** This heater must be installed in accordance with the latest edition of the Standard for Parking Structures, ANSI/NFPA 88A, or the Code for Repair Garages, ANSI/NFPA 90A.  
**VENTING.** This heater's venting system must comply with the following requirements:  
- Do not exceed 20 feet vent length or stack more than 2' 8" above in the venting system.  
- Use a CDCK vent kit for single sidewall venting.  
- CDCK Vent Kit for dual sidewall venting.  
- Common vented models (with Y fitting) must be vented on the same control.  
- A minimum ventilation rate of 4.5 cfm/1000 Btu/h is required for unvented operation.  
**WARNING:** To ensure system performance and safety, this unit must be properly vented.  
**SAFETY INSTRUCTIONS**  
**LIGHTING PROCEDURES**  
1. If any part is not on (is) secured.  
2. Open (turn on) gas supply to the heater.  
3. Close (turn on) electrical control (thermostat).  
4. If the heater fails to light, turn off gas, open electrical control and wait 5 minutes before repeating above steps.  
**SHUTDOWN PROCEDURES**  
1. Open (turn off) electrical control.  
2. Close (turn off) gas supply to the heater.

F/N: LLTCL006L, LLTCL001C/R  
Clearances to Combustibles Labels



**Clearances to Combustibles**

**⚠ WARNING**

Placement of explosive objects, flammable objects, liquids, and vapors close to the heater may result in explosion, fire, property damage, serious injury, or death. Do not store or use explosive objects, liquids, or vapor in the vicinity the heater.

Clearance to Combustibles is defined as **the minimum distance that must exist between the tube surface, or reflector, and any combustible items** (see Figure 1.1). It also pertains to the distance that must be maintained from moving objects around the tube heater. When installing the tube heater system, clearances to combustibles for the model tube heater and configuration must be maintained. Refer to Chart 1.1 to determine the required distances for your model.


Chart 1.1 • Clearances to Combustibles in Inches (see Figure 1.1 for Mounting Angles)

Model Number	Mounting Angle *	Sides		Top	Below
		Front	Behind		
DES3 (20, 30, 40) - (50, 60) [N, P]  with 1 side shield with 2 side shields 20 ft. from burner	0°	9	9	6	47
	45°	39	8	10	47
	0°	29	8	6	47
	0°	9	9	6	47
	0°	7	7	6	30
DES3 (20, 30, 40) - 75 [N, P]  with 1 side shield with 2 side shields 20 ft. from burner	0°	9	9	6	60
	45°	39	8	10	60
	0°	29	8	6	60
	0°	9	9	6	60
	0°	7	7	6	30
DES3 (30, 40, 50) - 100 [N, P]  with 1 side shield with 2 side shields 20 ft. from burner	0°	14	14	6	66
	45°	39	8	10	66
	0°	29	8	6	66
	0°	16	16	6	66
	0°	7	7	6	30
DES3 (30, 40, 50, 60) - 125 [N, P]  with 1 side shield with 2 side shields 20 ft. from burner	0°	20	20	6	76
	45°	58	8	10	76
	0°	42	8	6	76
	0°	20	20	6	76
	0°	7	7	6	30
DES3 (40, 50, 60) - 150 [N, P]  with 1 side shield with 2 side shields 20 ft. from burner	0°	24	24	6	81
	45°	58	8	10	81
	0°	42	8	6	81
	0°	23	23	6	81
	0°	11	11	6	44
DES3 (40, 50, 60) - 175 [N, P]  with 1 side shield with 2 side shields 20 ft. from burner	0°	34	34	6	92
	45°	63	8	10	92
	0°	50	8	6	92
	0°	30	30	6	92
	0°	11	11	6	44
DES3 (50, 60) - 200 [N, P]  with 1 side shield with 2 side shields 20 ft. from burner	0°	41	41	6	94
	45°	63	8	10	94
	0°	54	8	6	94
	0°	30	30	6	94
	0°	11	11	6	44

\* Heaters mounted on an angle between 0° and 45° must maintain clearances posted for 0° or 45°, whichever is greater.

The stated clearances to combustibles represents a surface temperature of 90°F (50°C) above room temperature. Building materials with a low heat tolerance (such as plastics, vinyl siding, canvas, tri-ply, etc.) may be subject to degradation at lower temperatures. It is the installer’s responsibility to assure that adjacent materials are protected from degradation.

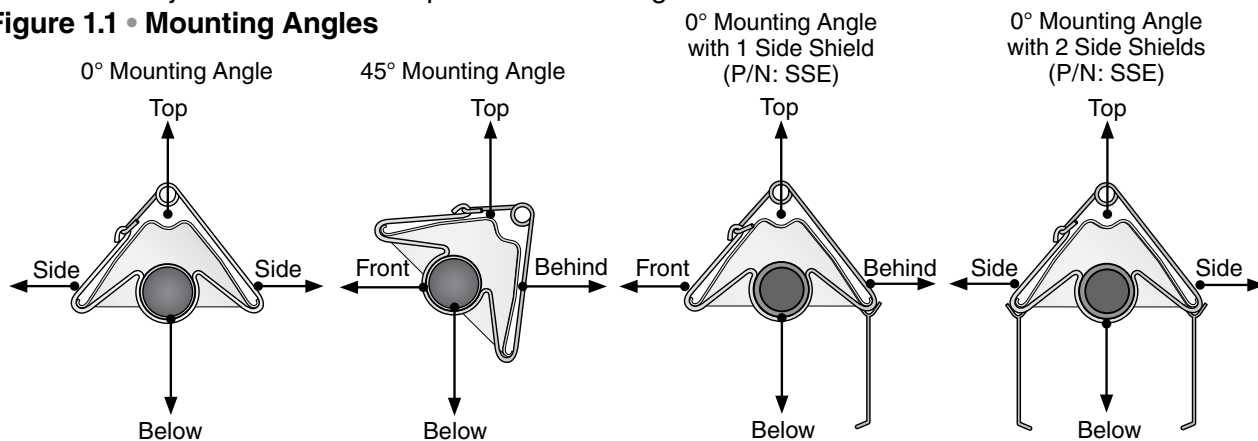Figure 1.1 • Mounting Angles



# 2.0 Installation

## ⚠ WARNING



Improper installation, adjustment, alteration, service, or maintenance can cause property damage, serious injury, or death. Read and understand the installation, operating, and maintenance instructions thoroughly before installing or servicing this equipment. Only trained, qualified gas installation and service personnel may install or service this equipment.

**Not for residential use!** Do not use this heater in the home, sleeping quarters, attached garages, etc. **Installation of a commercial tube heater system in residential indoor spaces may result in property damage, serious injury, or death.**

Instructions for the following are detailed in the Tube Heater General Manual:

- Design considerations
- Hanger suspension and placement
- Tube layout and assembly
- Burner control box suspension
- Reflectors (and accessories)
- Venting and combustion air intake
- Gas requirements
- Baffle assembly

**NOTE:** Electronic versions of all manuals are available at [www.detroitradiant.com](http://www.detroitradiant.com)

## Gas Requirements

Type of Gas	Required Manifold Pressure	Minimum Inlet Pressure	Maximum Inlet Pressure
Natural	3.5 inches W.C.	5.0 inches W.C.	14.0 inches W.C.
Propane	10.0 inches W.C.	11.0 inches W.C.	14.0 inches W.C.



**IMPORTANT:** Consult the Tube Heater General Manual for gas connection requirements.

## Electrical Requirements

- 120VAC - 60 Hz, GND, 3-wire
- 120VAC thermostat connection; 24VAC with optional relay transformer
- Starting current 1.7 amps
- Running current 1.1 amps

# Wiring

## ⚠ WARNING




### Electric Shock


Field wiring to the tube heater must be connected and grounded in accordance with national, state, provincial, and local codes and to the guidelines in the Tube Heater General Manual and Series Insert Manual. In the United States refer to the most current revisions to the ANSI/NFPA 70 Standard, and in Canada refer to the most current revisions to the CSA C22.1 Part I Standard.

**Figure 2.1 • Field Wiring Diagrams**

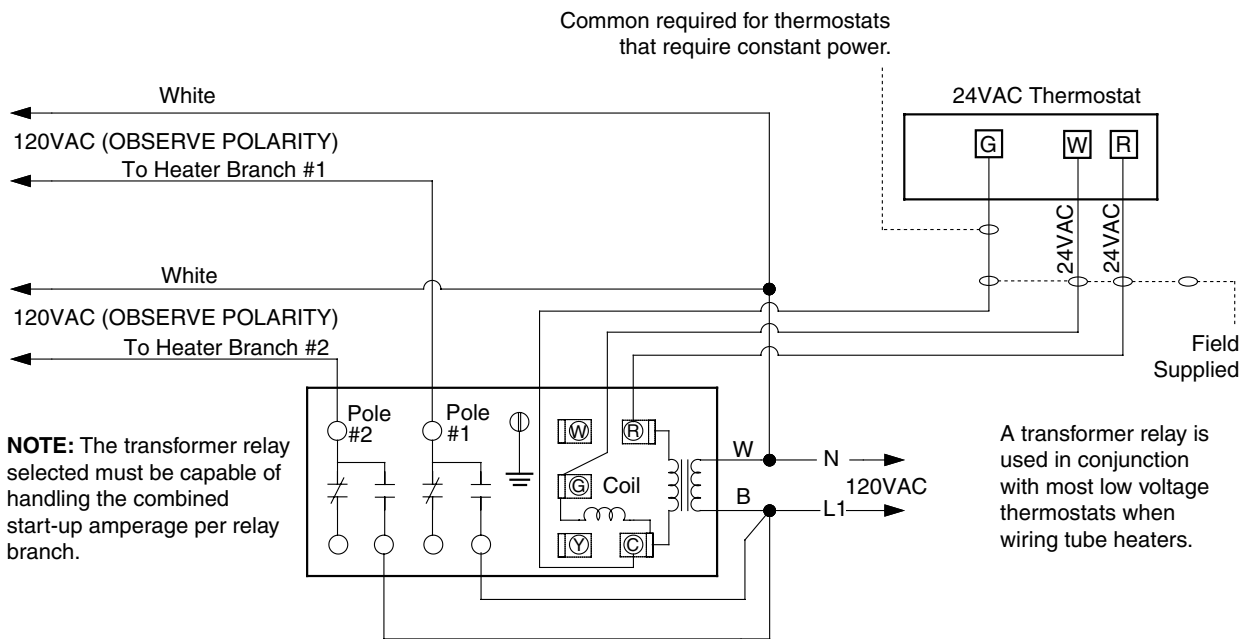**A. 24VAC Thermostat Control (requires optional combination relay transformer P/N: R8285B)**




**B. 120VAC Thermostat Connection(s)**

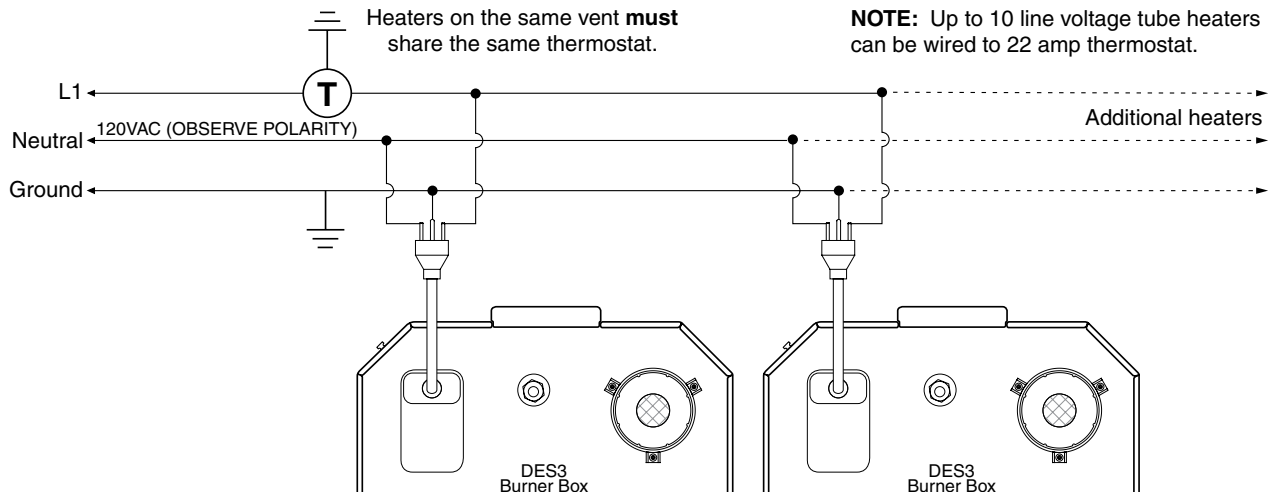

Before field wiring this appliance - Check existing wiring; replace if necessary.

**NOTE:** If any of the original wire supplied with the appliance must be replaced, it must be replaced with wiring material having a rating of at least 600 V and 105°C.

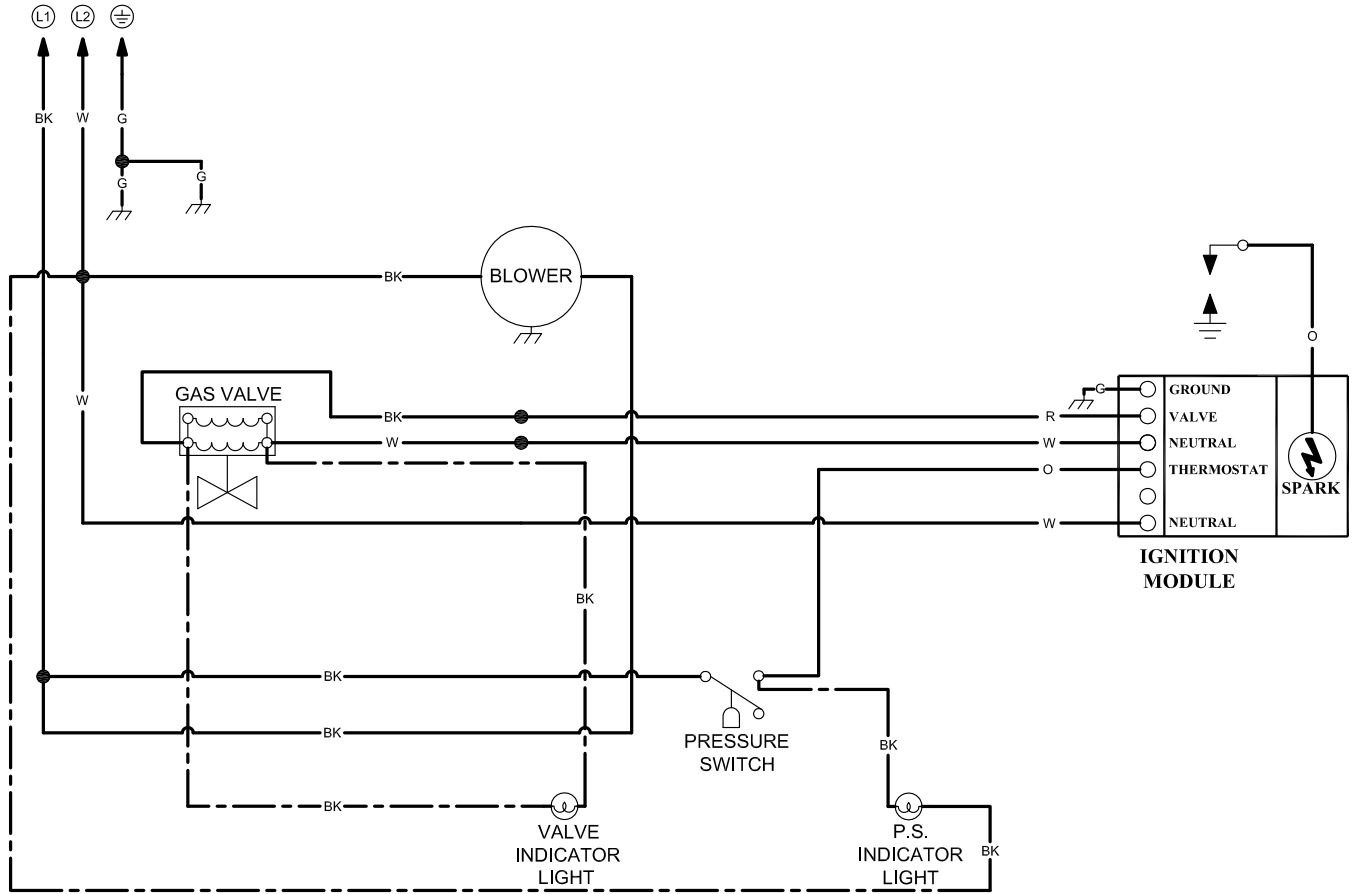**Figure 2.2 • Internal Wiring Diagrams**



**WIRING INFORMATION:**

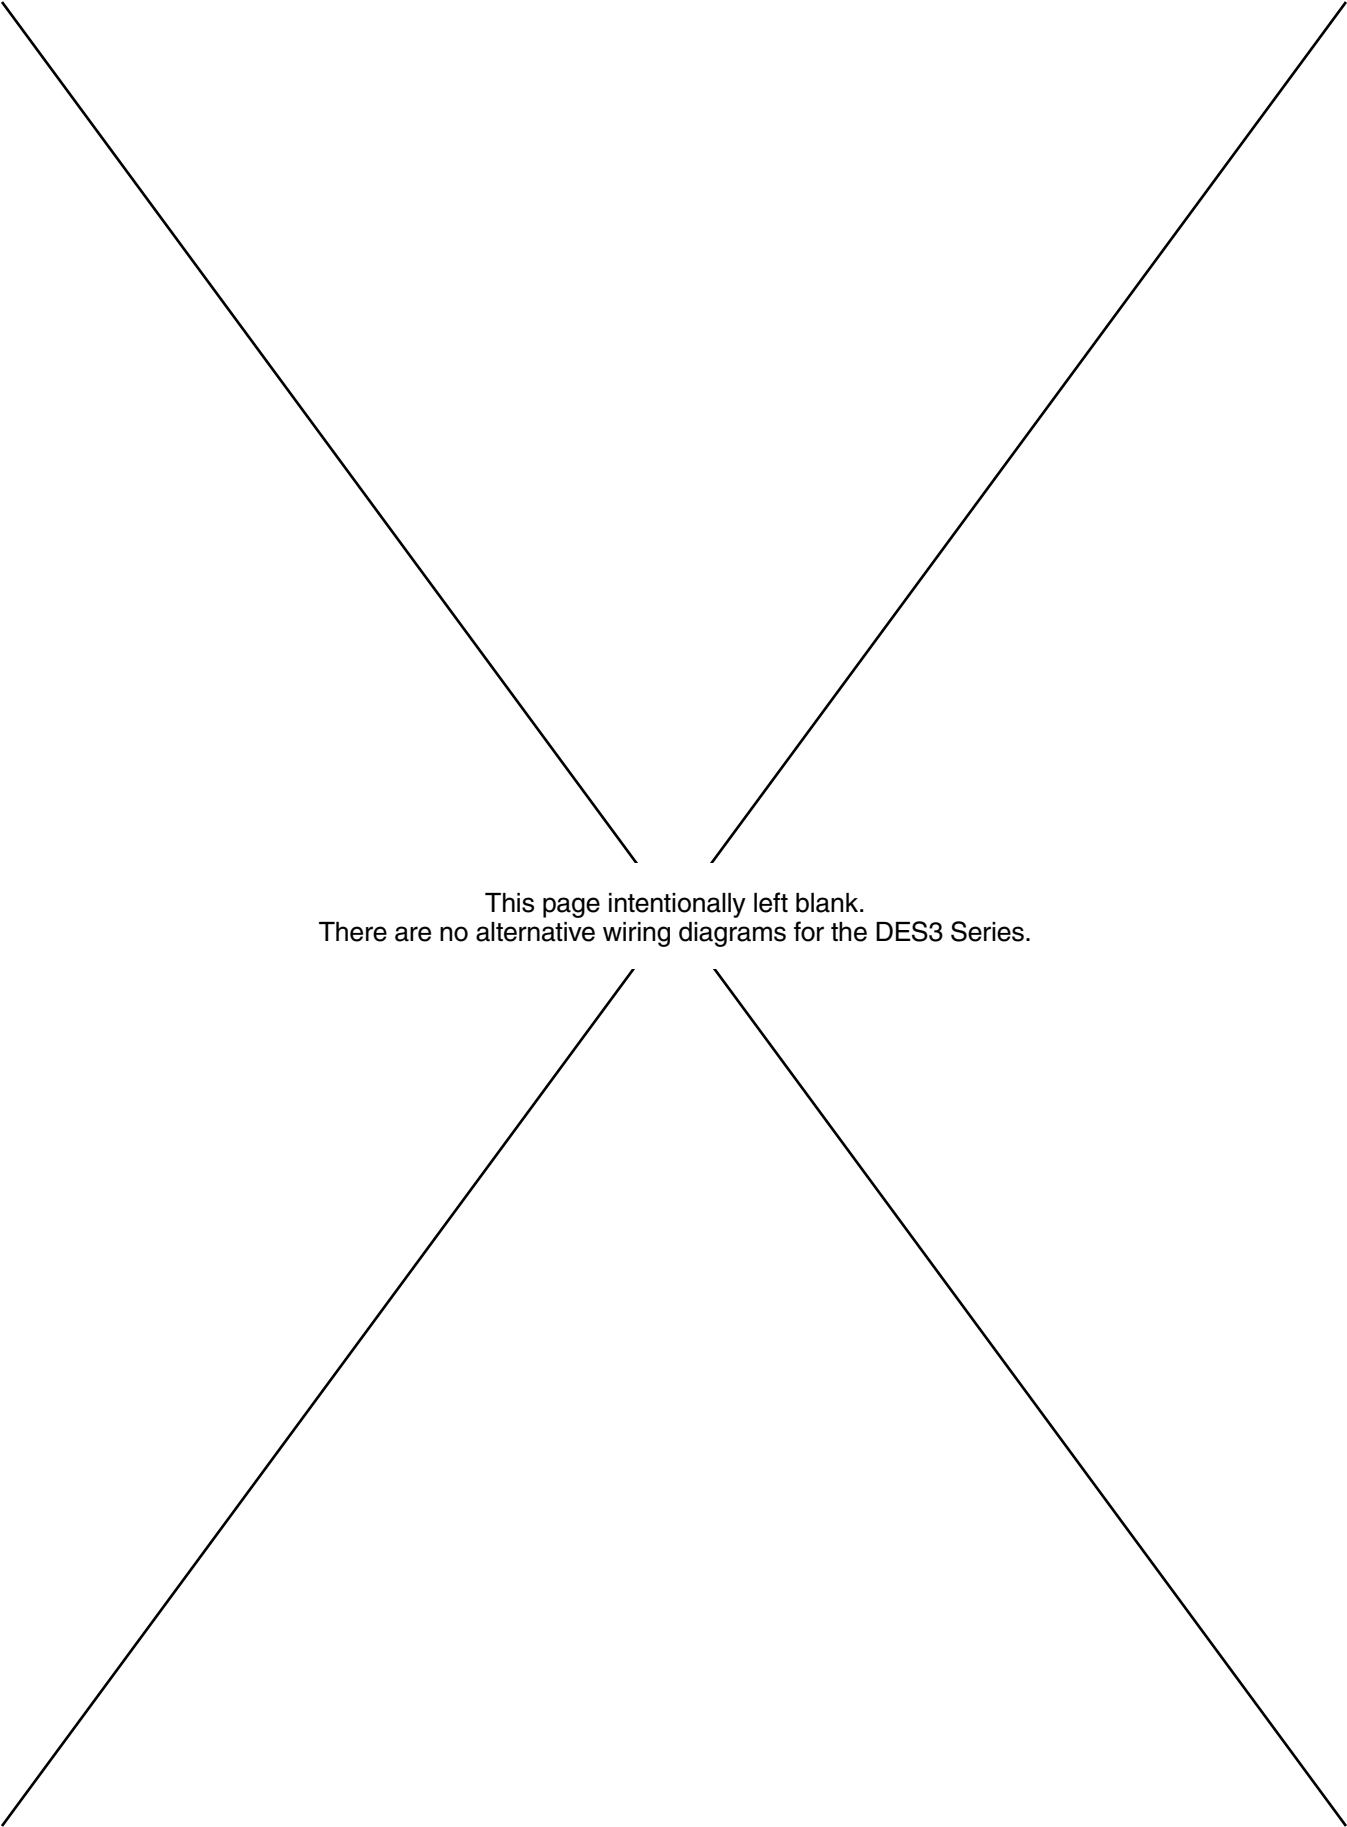
**LINE VOLTAGE:**

- FACTORY STANDARD —————
- FACTORY OPTION - - - - -
- FIELD INSTALLED . . . . .

**LOW VOLTAGE:**

- FACTORY STANDARD —————
- FACTORY OPTION - - - - -
- FIELD INSTALLED . . . . .





This page intentionally left blank.  
There are no alternative wiring diagrams for the DES3 Series.

## Specifications

Chart 2.1 • Specifications

Model Number	Gas Type (Select One)	BTU/h	Straight Length	U-Tube Length	Standard Weight (lbs.)	Recommended Mounting Height <sup>^</sup>	Combustion Chamber(s) (Black Coated)	Radiant Emitter Tube(s) (Uncoated)	36" Baffle Quantity
DES3-20-50	Nat. or Prop.	50,000	21'-9"	13'-1"	120	9' to 14'	Alum	HRT	5
DES3-20-60	Nat. or Prop.	60,000	21'-9"	13'-1"	120	10' to 15'	Alum	HRT	5
DES3-20-75	Nat. or Prop.	75,000	21'-9"	13'-1"	120	11' to 18'	Alum	HRT	5
DES3-30-50	Nat. or Prop.	50,000	31'-5"	**17'-9"	160	10' to 15'	Alum	HRT	5
DES3-30-60	Nat. or Prop.	60,000	31'-5"	**17'-9"	160	11' to 18'	Alum	HRT	5
DES3-30-75	Nat. or Prop.	75,000	31'-5"	**17'-9"	160	12' to 20'	Alum	HRT	5
DES3-30-100	Nat. or Prop.	100,000	31'-5"	**17'-9"	160	13' to 23'	Alum	HRT	5
DES3-30-125	Nat. or Prop.	125,000	31'-5"	**17'-9"	160	14' to 25'	Alum	HRT	6
DES3-40-50	Nat. or Prop.	50,000	41'-1"	22'-9"	190	11' to 18'	Alum	HRT	5
DES3-40-60	Nat. or Prop.	60,000	41'-1"	22'-9"	190	11' to 18'	Alum	HRT	5
DES3-40-75	Nat. or Prop.	75,000	41'-1"	22'-9"	190	12' to 20'	Alum	HRT	4
DES3-40-100	Nat. or Prop.	100,000	41'-1"	22'-9"	190	13' to 23'	Alum	HRT	4
DES3-40-125	Nat. or Prop.	125,000	41'-1"	22'-9"	190	14' to 25'	Alum	HRT	5
DES3-40-150*	Nat. or Prop.	150,000	41'-1"	22'-9"	190	15' to 27'	Titan/Alum	HRT	5
DES3-40-175*	Nat. or Prop.	175,000	41'-1"	22'-9"	190	17' to 35'	Titan/Alum	HRT	5
DES3-50-100	Nat. or Prop.	100,000	50'-9"	**27'-5"	235	15' to 27'	Alum	HRT	2
DES3-50-125	Nat. or Prop.	125,000	50'-9"	**27'-5"	235	15' to 27'	Alum	HRT	3
DES3-50-150*	Nat. or Prop.	150,000	50'-9"	**27'-5"	235	16' to 30'	Titan/Alum	HRT	3
DES3-50-175*	Nat. or Prop.	175,000	50'-9"	**27'-5"	235	17' to 35'	Titan/Alum	HRT	3
DES3-50-200*	Nat. or Prop.	200,000	50'-9"	**27'-5"	235	18' to 40'	Titan/Alum	HRT	2
DES3-60-125	Nat. or Prop.	125,000	60'-5"	32'-5"	265	16' to 30'	Alum	HRT	2
DES3-60-150*	Nat. or Prop.	150,000	60'-5"	32'-5"	265	17' to 35'	Titan/Alum	HRT	2
DES3-60-175*	Nat. or Prop.	175,000	60'-5"	32'-5"	265	17' to 35'	Titan/Alum	HRT	2
DES3-60-200*	Nat. or Prop.	200,000	60'-5"	32'-5"	265	18' to 40'	Titan/Alum	HRT	2

\* Model requires stainless steel tube clamp (P/N: TP-220) to be located at the seam between the primary combustion chamber and the secondary combustion tube downstream of the burner control box.

\*\* Model requires 5EA-SUB accessory package when installing in a 'U' configuration (P/N: TF1B).

<sup>^</sup> Factory recommended mounting heights are listed as a guideline.

**IMPORTANT:** Reference box label to determine the quantity of required baffle sections for each model heater.

HRT = Uncoated hot-rolled steel.


Alum = Black coated aluminized treated steel.

Titan = Black coated titanium stabilized aluminized steel.

# Tube Installation Sequence

Figure 2.3 • Tube Installation Sequence

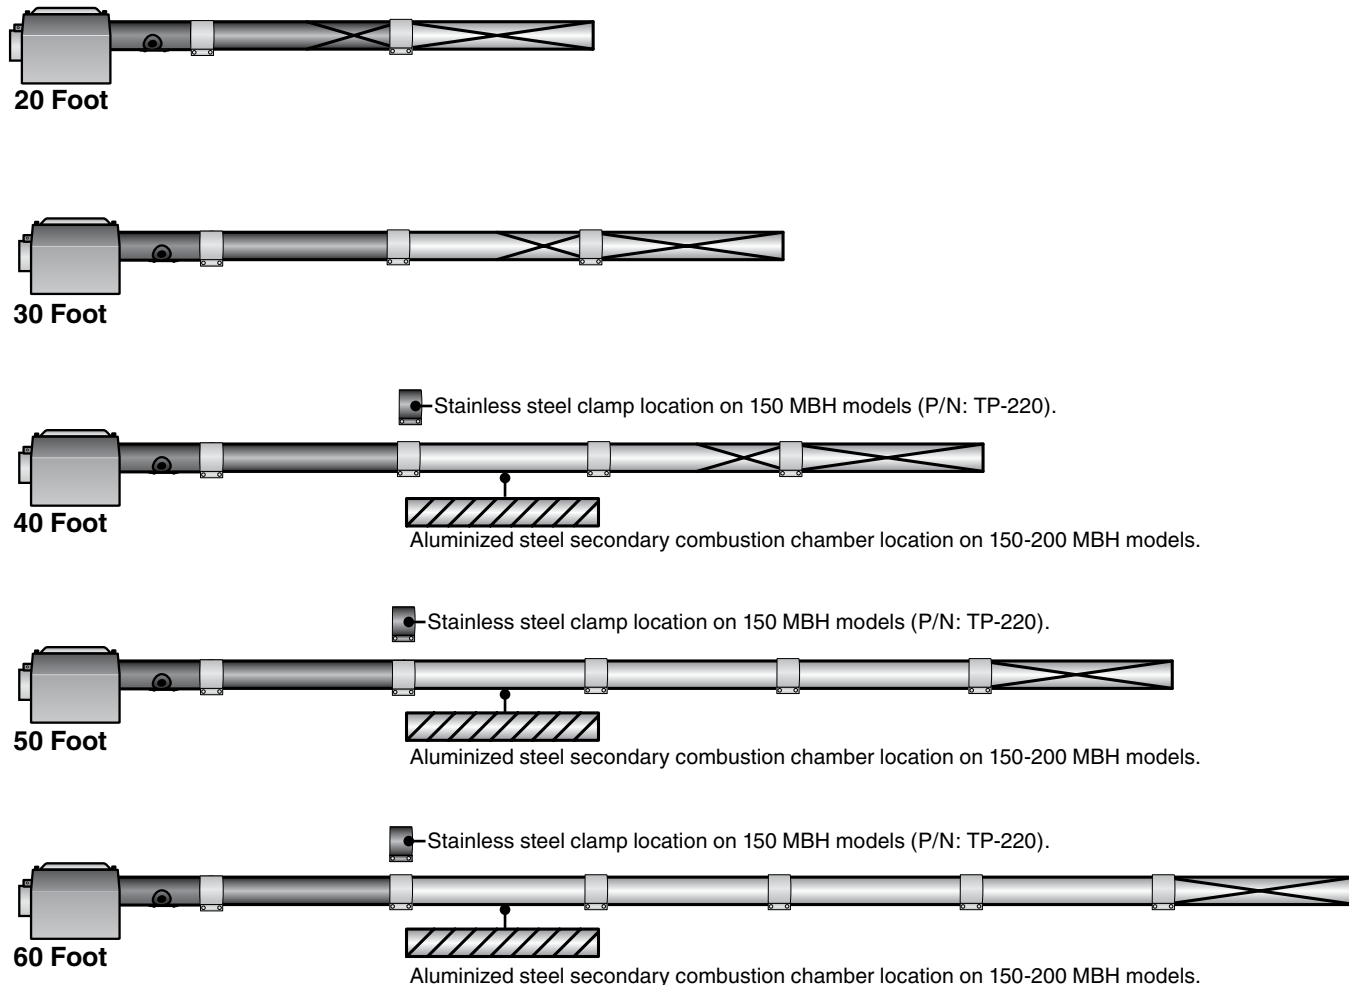**Important!** The combustion chamber & radiant tube sections must be installed in the following order.



Key			
	Burner Control Box with 16" Burner Tube		Hot-rolled Steel Radiant Emitter Tube
	Primary Combustion Chamber Tube		Standard Tube Clamp
	Secondary Aluminized Steel Combustion Chamber (150-200 MBH models only)		Stainless Steel Tube Clamp (P/N: TP-220) <i>150-200 MBH models only - Located between 1st and 2nd 10 ft. tube sections.</i>
			Baffle Location

**NOTE:** Refer to the Tube Heater General Manual, Chart 3.6 (page 23) for secured reflector joints.

## 3.0 Operation

### ⚠ WARNING



This heater must be installed and serviced by trained gas installation and service personnel only.

Do not bypass any safety features or the heater's built in safety mechanisms will be compromised.

**NOTE:** Reference the Tube Heater General Manual for installation requirements.

### Sequence of Operation

**Starting Circuit:** Upon a call for heat, the fan is energized. Once operational static pressure is achieved, the differential switch will close initiating the ignition sequence. After a 7-second pre-purge, the spark electrode is energized and the gas valve opens. The trial for ignition is 15 seconds. If flame is not sensed, the heater will attempt two (2) additional ignition sequences before proceeding into hard lockout.

**Running Circuit:** After ignition, the control senses and monitors burner flame through the electrode. If sense of flame is lost, the control immediately disrupts power to the gas valve and then re-cycles the unit (identical to the starting sequence). If flame sense is not established within 15 seconds, the heater will attempt two (2) additional ignition sequences before proceeding to hard lockout. The control can be reset by briefly interrupting the power source.

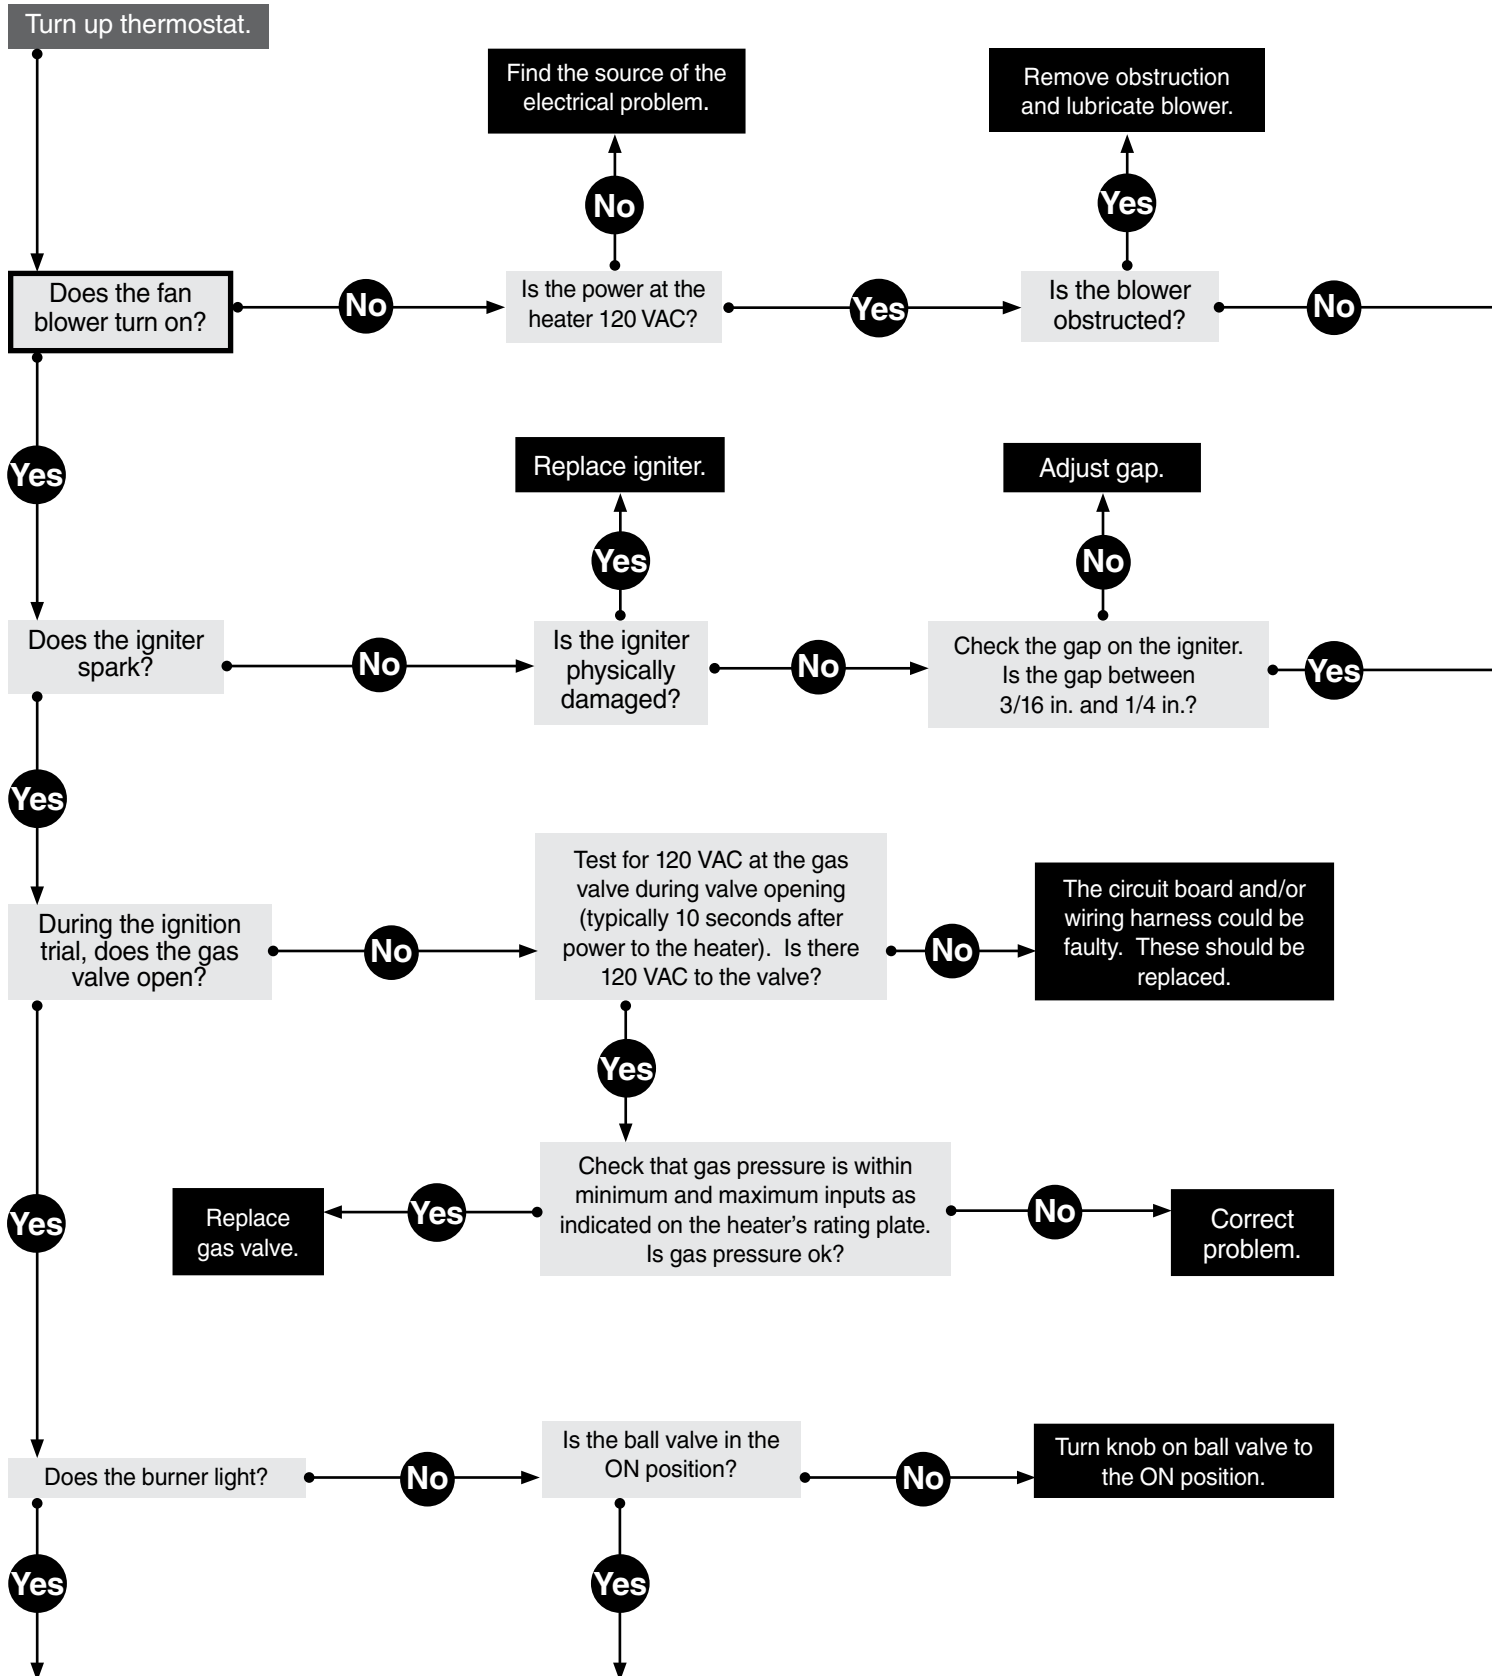
### Thermostat

**NOTE:** Different thermostats operate according to their particular features. Refer to thermostat specifications for details.



This page intentionally left blank.

# 4.0 Troubleshooting Guide



Continued on page 16.

**\* NOTICE**

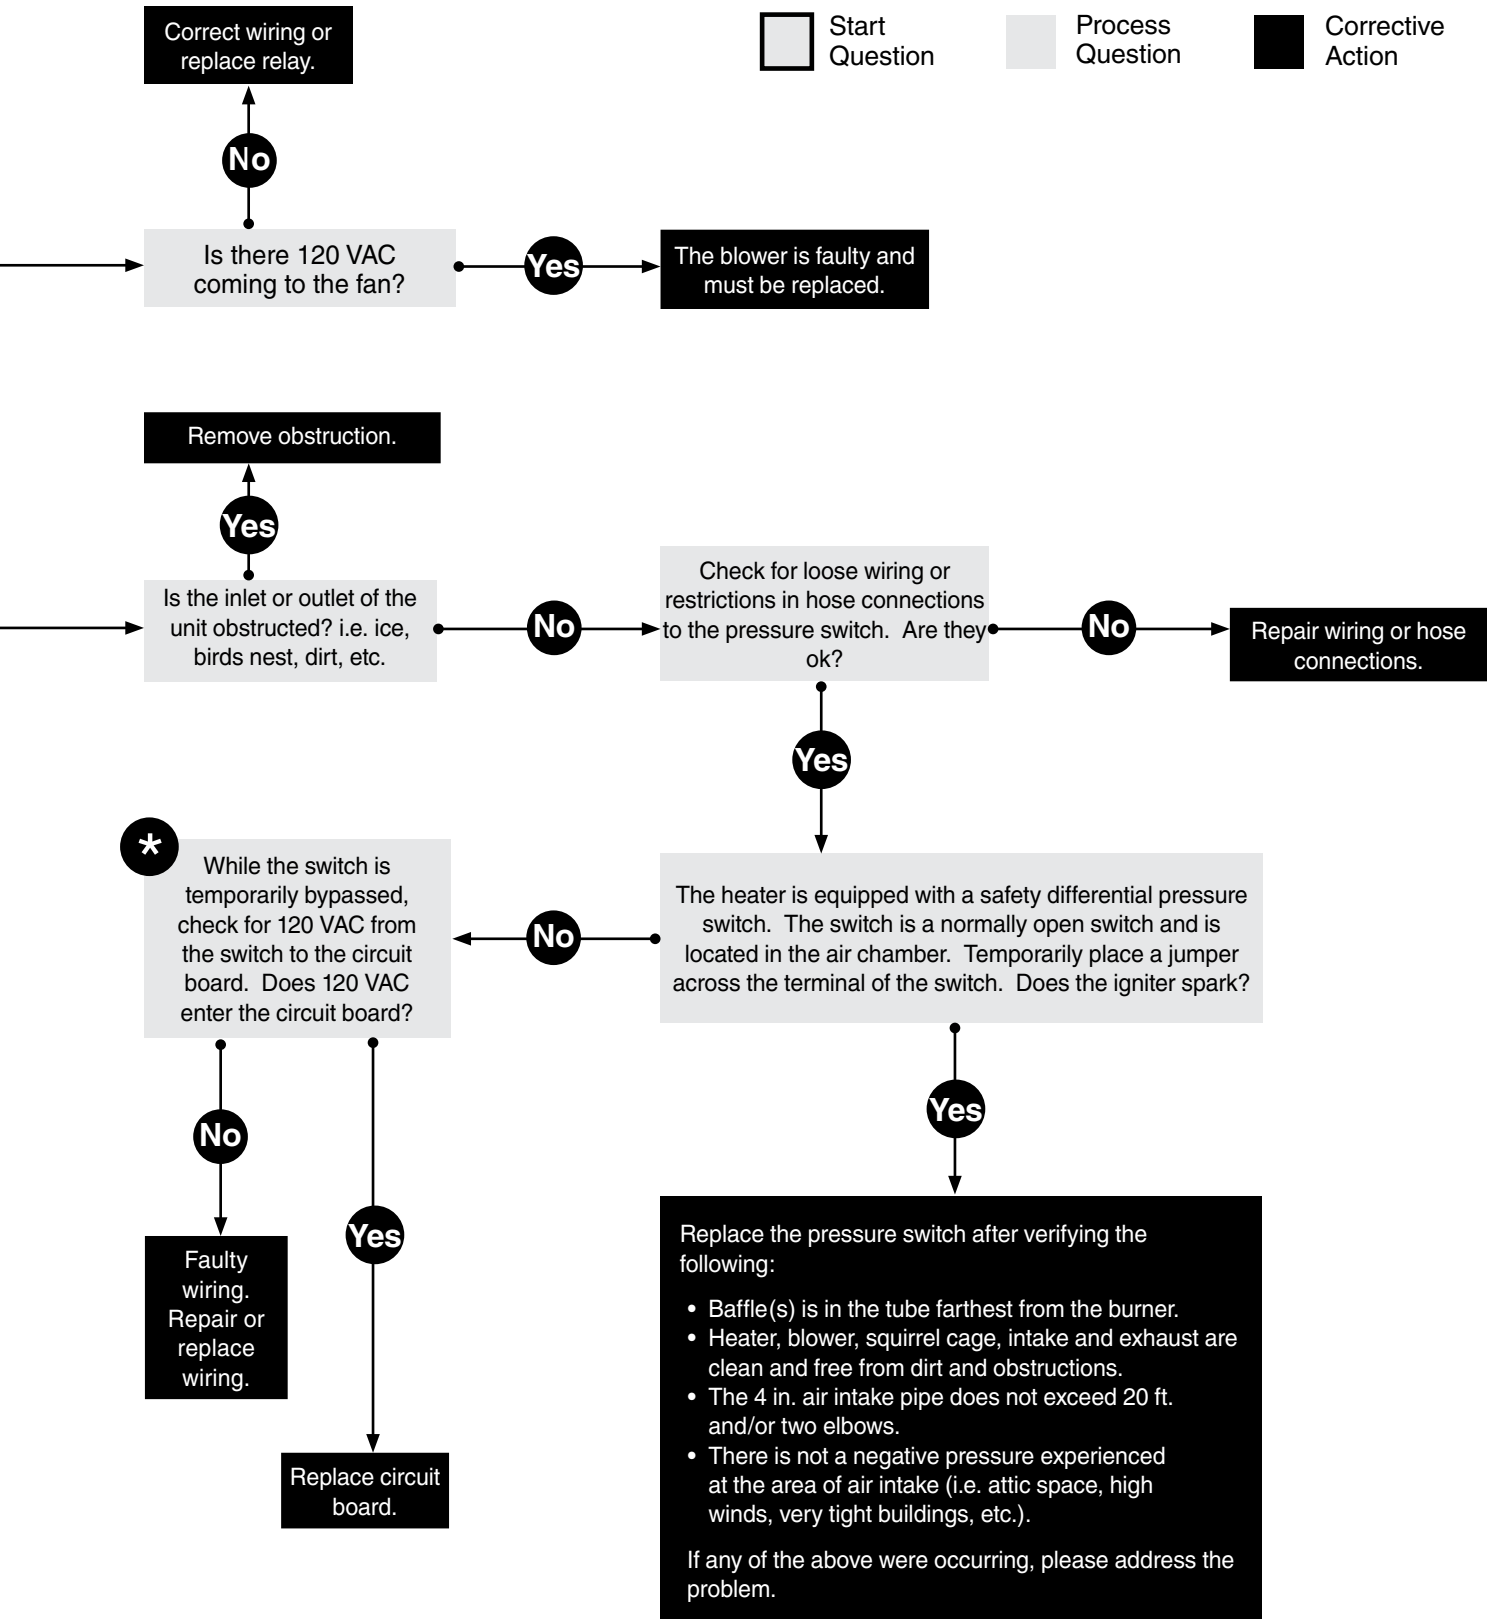
Bypassing any switch is intended for testing purposes only. Do not leave switch bypassed during normal operation or the heater's built-in safety mechanisms will be compromised.

**Key**


Start Question

Process Question


Corrective Action



Continued from page 14.

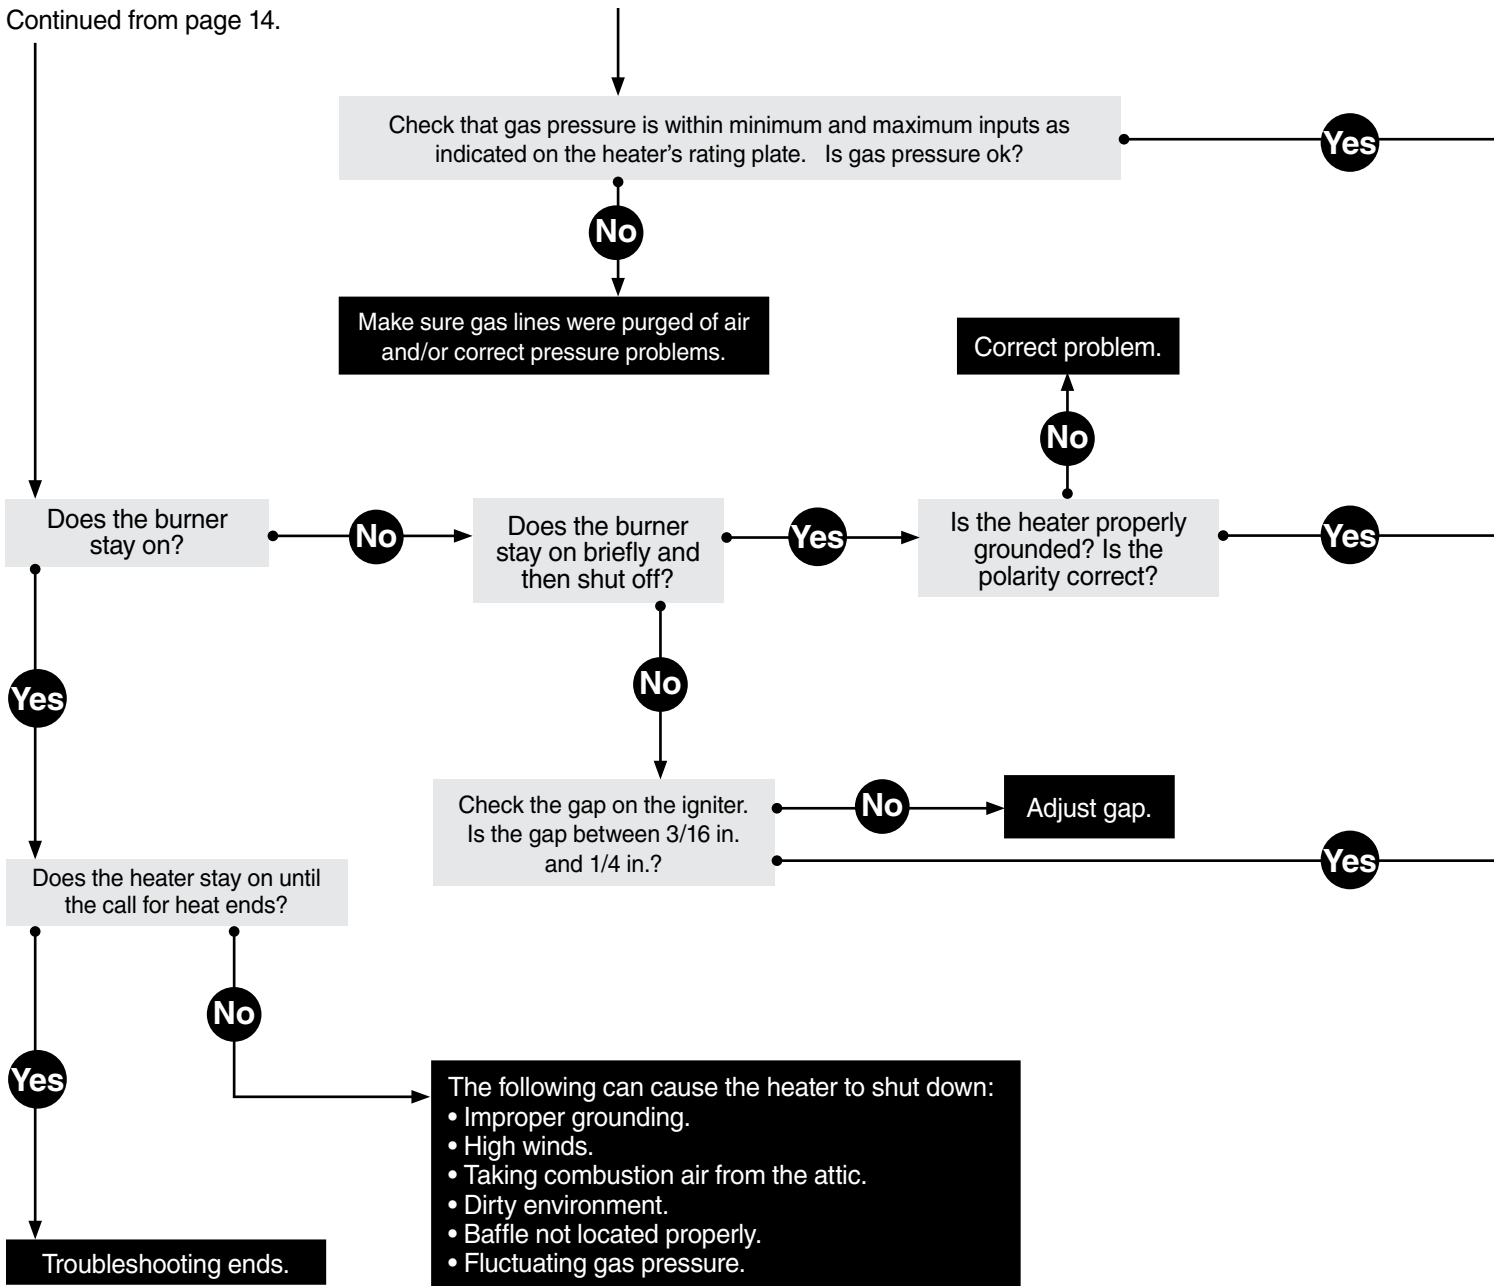




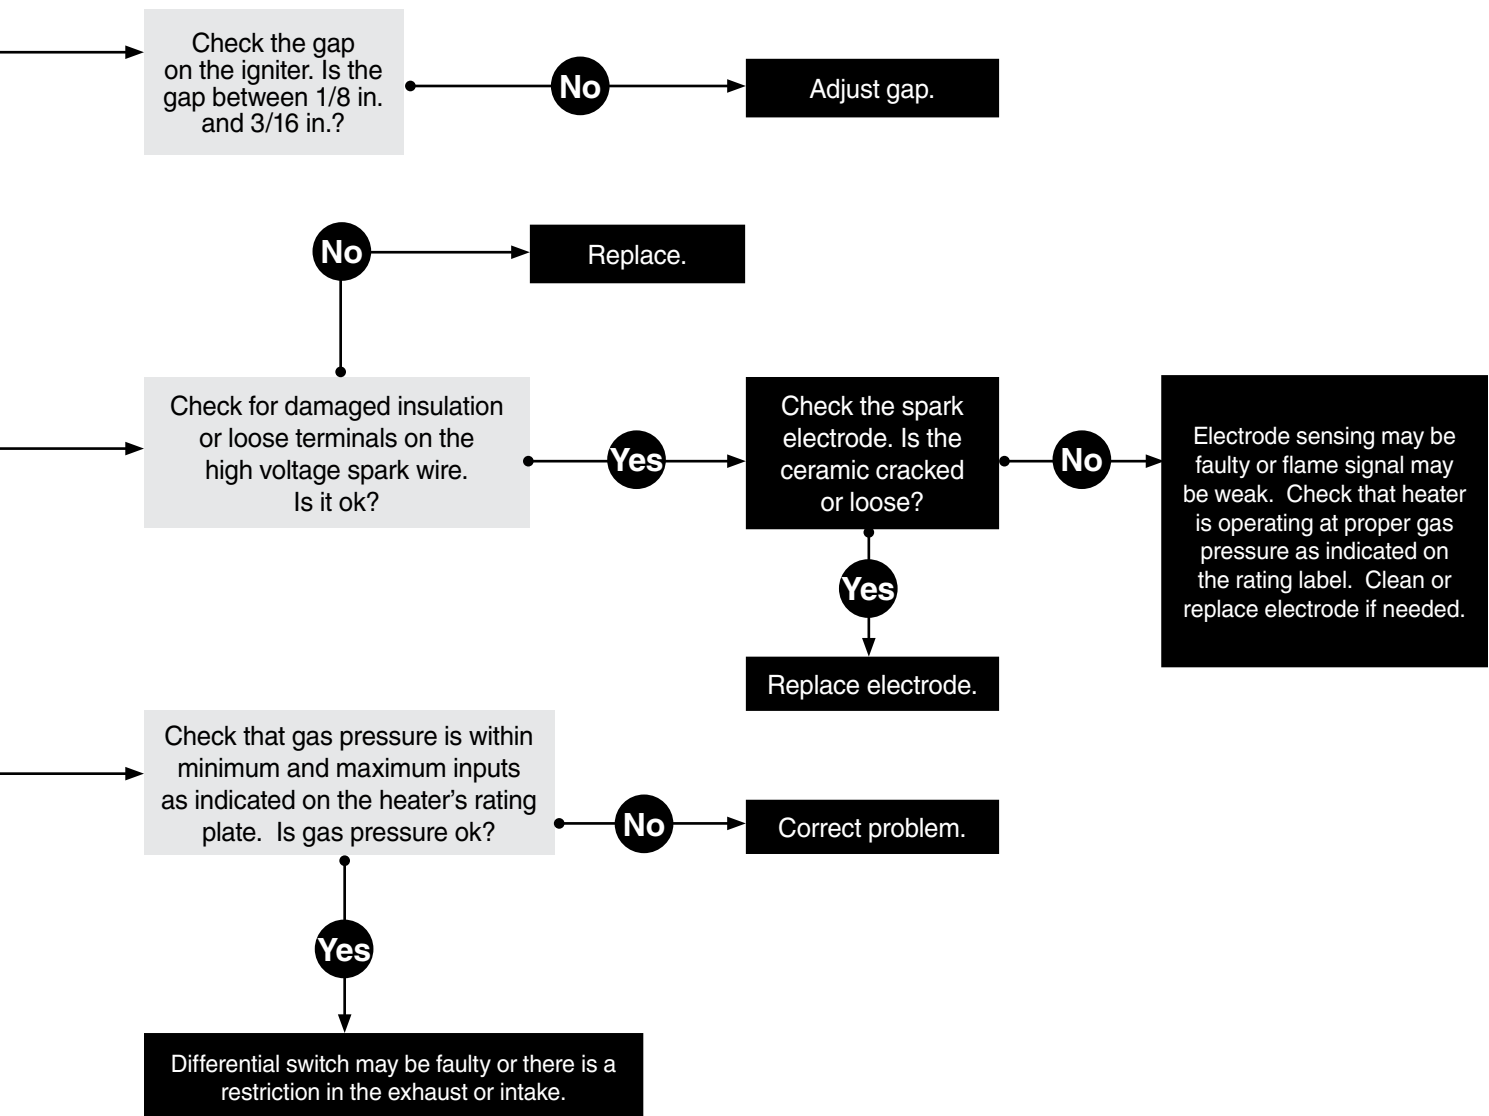

### Flame Current Check: Single Spark & Sense

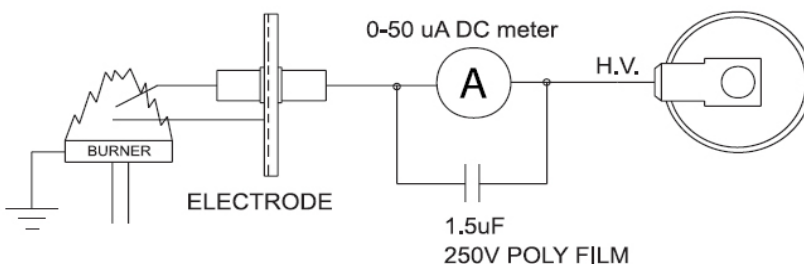To measure flame current, disconnect input voltage, then insert a 0-50  $\mu\text{A}$  DC meter and capacitor in series with the spark electrode as shown below. Reconnect input voltage and initiate call for heat. After sparking is complete and flame is established, meter should read 1.0  $\mu\text{A}$  or higher while flame is established. If meter reads below “0” on the scale, meter leads are reversed. Disconnect power and reconnect meter lead for proper polarity.



# 5.0 Parts

Figure 5.1 • Burner Assembly Components

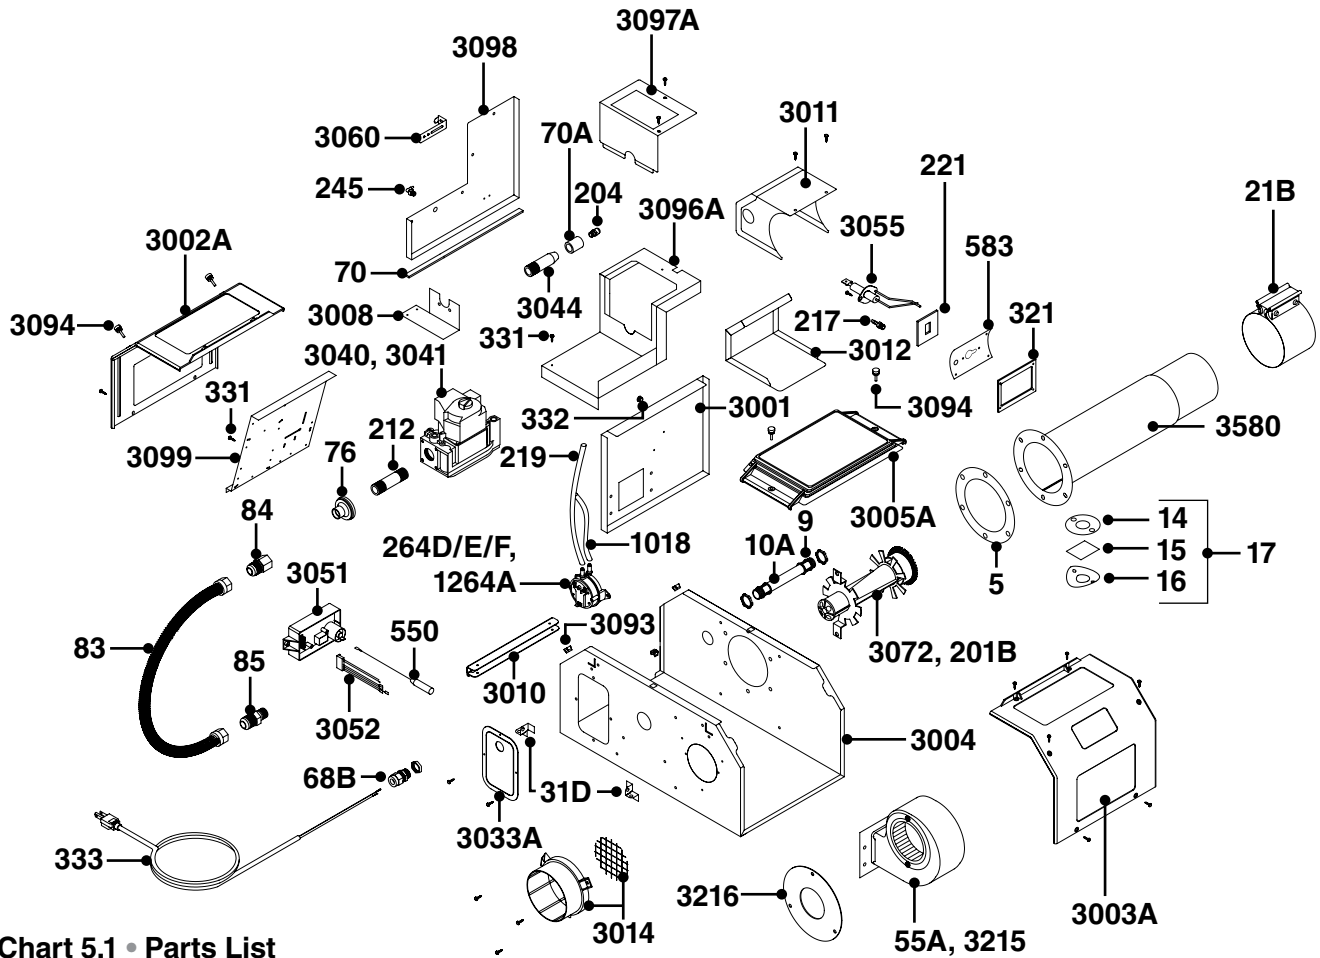


Chart 5.1 • Parts List

Part #	Description	Part #	Description
TP-5	Flange Gasket	TP-70A	1 in. Control Box Gasket (6 inches)
TP-9	Conduit Coupling	TP-76	Rubber Grommet
TP-10A	Conduit	TP-82	Reflector Center Support
TP-14	Sight Glass Gasket	TP-83	Stainless Steel Flexible Gas Connector
TP-15	Sight Glass	TP-84	1/2 in. Female/Male Flare Fitting
TP-16	Sight Glass Washer	TP-85	1/2 in. Male / Male Flare Fitting
TP-17	Sight Glass Kit	TP-105	Reflector End Cap
TP-19B	4 in. Wire Hanger with Tension Spring	TP-106	Reflector End Cap Clips (8 pcs.)
TP-20C	10 ft. Aluminum Reflector	TP-113	Reflector Tension Spring
TP-20D*	10 ft. Stainless Steel Reflector*	TP-201B	V.3 Mid-High Burner (Color Code - TAN)
TP-21B	4 in. O.D. Tube Clamp	TP-204	Gas Orifice - consult factory
TP-26A	10 ft. Aluminized Combustion Tube	TP-212	1/2 in. x 3 in. Pipe Nipple
TP-26B	10 ft. Titanium Primary Combustion Tube	TP-217	Brass Pressure Switch Barb Fitting
TP-26C	10 ft. Uncoated Hot Rolled Radiant Tube	TP-219	Differential Vinyl Sensing Tube
TP-31D	Mounting Bracket (Qty. 2)	TP-220	4 in. O.D. Stainless Steel Tube Clamp
TP-55A	1/20 hp Inducer Assembly (50-150 MBH)	TP-221	Spark Igniter Mounting Bracket Gasket
TP-65I	36 in. Interlocking Turbulator Baffle Section	TP-245	3/16" X 1/8" Plastic Gas Valve 90° Vent
TP-68B	Large Strain Relief Bushing	TP-264D	Differential Pressure Switch, 60 to 75 MBH
TP-70	1/2 in. Control Box Gasket (10.3 inches)	TP-264E	Differential Pressure Switch, 50 MBH

\* Optional upgrade or add-on item.

Figure 5.2 • Tube and Reflector Components

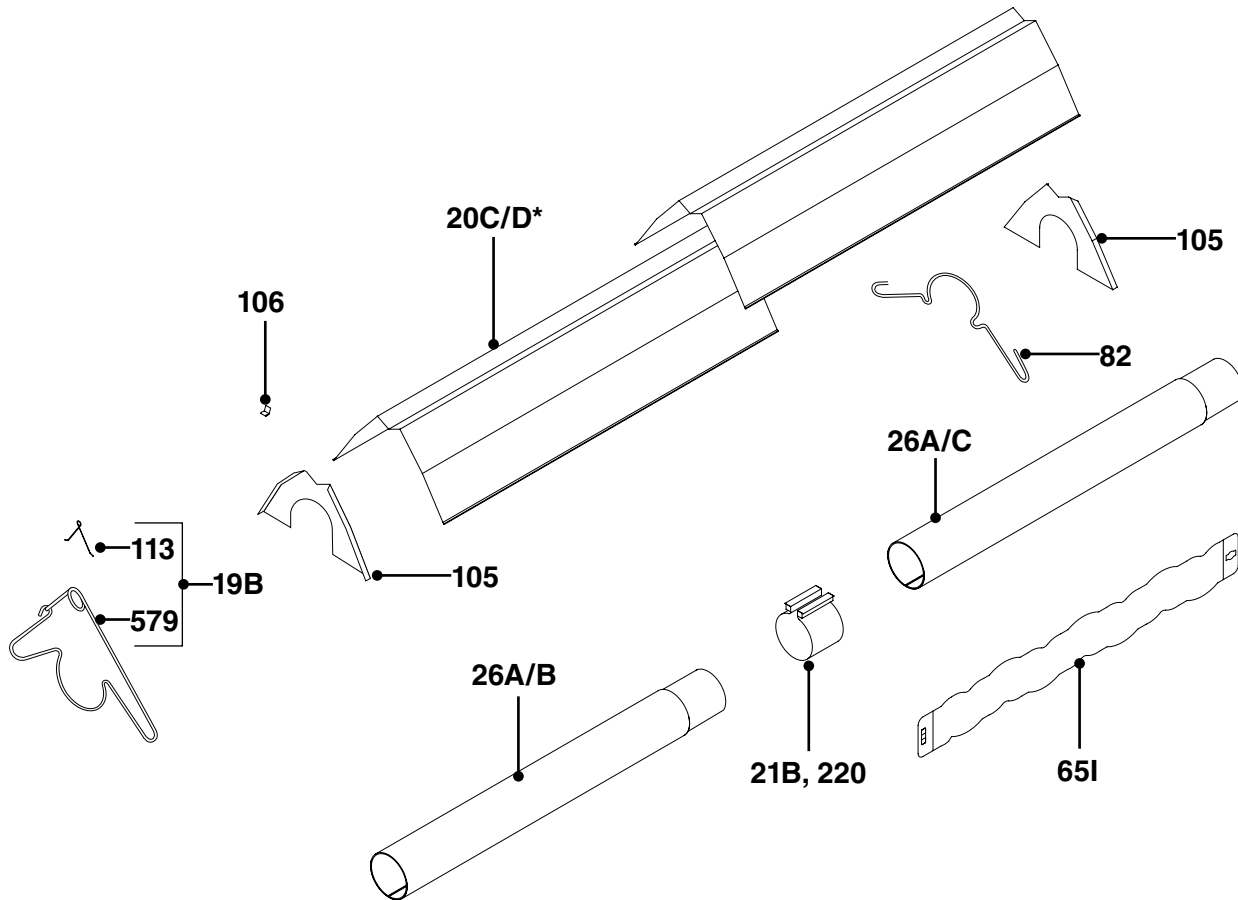


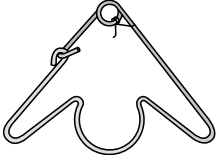






Chart 5.2 • Parts List

Part #	Description	Part #	Description
TP-264F	Differential Pressure Switch, 150 to 200 MBH	TP-3040	VR4205-1324 Natural Gas Valve Assembly
TP-321	Ignition Plate Gasket	TP-3041	VR4205-1357 Propane Gas Valve Assembly
TP-331	Green Self-Tap Ground Screw (Qty. 2)	TP-3033A	Power Entry Plate "A"
TP-332	Divider Grommet	TP-3044	Gas Manifold
TP-333	6 ft. Black 120VAC Power Cord	TP-3051	35-72 DSI Circuit Board
TP-579	4 in. Wire Hanger	TP-3052	Wiring Harness
TP-583	Spark Igniter Plate	TP-3055	Spark Igniter Electrode
TP-1018	APS 1/4 in. Silicone Sensing Tube	TP-3060	Pressure Switch Mounting Bracket
TP-1264A	Differential Pressure Switch, 100 to 125 MBH	TP-3072	Low BTU Burner (Color Code - GREEN)
TP-3001	Divider Panel	TP-3093	#8-32 Cage Nut (Qty. 4)
TP-3002A	Left End Panel	TP-3094	#8-32 x 1/2 in. Black Nylon Shoulder Screw (Qty. 4)
TP-3003A	Right End Panel	TP-3096A	Valve Compartment Bottom Panel
TP-3004	Main Control Box Panel	TP-3097A	Valve Compartment Top Panel
TP-3005A	Control Box Chamber Lid	TP-3098	Valve Compartment Side Panel
TP-3008A	Gas Valve Mounting Bracket	TP-3099	Controls Mounting Panel
TP-3010	Service Panel Hinge	TP-3215	1/15 hp Inducer Assembly (175-200 MBH)
TP-3011	Spark Igniter Box	TP-3216	Restrictor Plate (175-200 MBH)
TP-3012	Spark Igniter Box Cover	TP-3580	16 in. DSI Burner Tube Flange with Fittings
TP-3014	V.3 Plastic Air Orifice w/Screen-Contact Factory		

\* Optional upgrade or add-on item.

## Kit Contents Check List

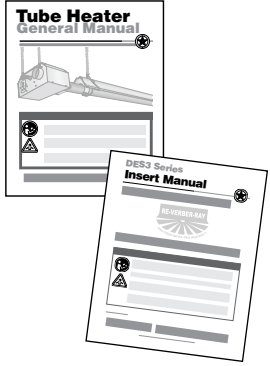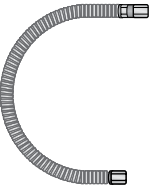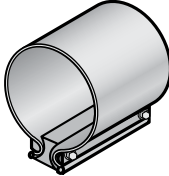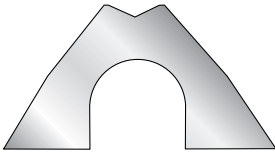Chart 5.3 • Kit Contents for DES3 Series - Reference the length column for your model.

DES3 Series Kit Contents						
<p><b>TP-19B</b> 4" Hanger with Reflector Tension Spring</p> 	<p><b>TP-82</b> 4 in. Reflector Center Support (RCS)</p> 	<p><b>TP-106</b> Reflector End Cap Clips</p> 	<p>General Manual and DES3 Series Insert F/N: LIOGT3 &amp; LIODES3</p> 			
<p><b>TP-83</b> 24 in. Stainless Steel Flex. Gas Connector</p> 	<p><b>TP-21B</b> 4" Tube Clamp</p> 	<p><b>TP-105</b> Reflector End Cap</p> 				
Part No.	Description	20 ft.	30 ft.	40 ft.	50 ft.	60 ft.
TP-19B	4 in. Wire Hanger	3	4	5	6	7
TP-21B	4 in. Tube Clamps	2	3	4	5*	6*
TP-82	4 in. Reflector Center Support	1	1	1	1	1
TP-83	24 in. S.S. Flexible Gas Connector	1	1	1	1	1
TP-105	Reflector End Caps	2	2	2	2	2
TP-106	Reflector End Cap Clips	8	8	8	8	8
LIOGT3	Tube Heater General Manual	1	1	1	1	1
LIODES3	DES3 Series Insert Manual	1	1	1	1	1
<b>Filled By:</b>						

\*One 4" stainless steel tube clamp (P/N: TP-220) is provided for each 150,000 - 200,000 BTU model. Place as shown on page 11.

### Approvals

- CSA
- Indoor Approval
- Outdoor Approval with OD-Kit
- Commercial Approval

### Limited Warranty

- 1 year - Burner box components
- 2 years - Combustion and radiant tubes
- 3 years - Stainless steel burner
- See page 36 of the Tube Heater General Manual for Terms and Conditions



© 2017 Detroit Radiant Products Co.  
 21400 Hoover Road • Warren, MI 48089  
 Phone: (586) 756-0950 Fax: (586) 756-2626  
 www.detroitradiant.com • sales@drp-co.com

